



BossJet Max Skid Jetter User Manual

WARNING: These are **HIGH POWERED UNITS** that can harm you if used incorrectly. Be sure to read all manuals before operating and wear safety clothing during operation.

Before Starting

Read all owner's manuals sent with this jetter before operation. Instructions for engine and pump maintenance can be found in their respective manuals.

Jetting Operation Overview

1. Locate machine in operation position. Gasoline engines need to be outside.
2. Connect pressure hose from pump to foot pedal or ball valve.
3. Connect foot pedal or ball valve to hose reel.
4. Sewer hose should be rolled onto reel so it will roll off from the top of the reel.
5. Install jetter nozzle.
6. Insert sewer hose about three feet into drain.
7. Connect and turn on garden hose water supply.

8. Start machine. CAUTION – Never let engine run more than 2 minutes without starting jetting water flow.
9. Regulate operating water pressure to job requirements.
10. Hold onto sewer hose.
11. Turn on water flow with foot pedal or ball valve.
12. Jet flow from sewer nozzle will pull the sewer hose into the sewer line.

Caution

1. Always wear protective safety gear, such as, but not limited to, raincoat or coveralls, rubber boots, a face shield or goggles, gloves, and hearing protection.
2. Never start the machine with the jetter nozzle outside the drain.
3. Do NOT remove the jetter nozzle from the drain while the unit is under pressure.
4. Do NOT run the machine for more than 2 minutes with the jetter water flow shut off (by-pass mode). This will overheat the pump and could cause injury to you.
5. To start the water flow, step on the foot valve or open the ball valve slowly for a smooth start up procedure.
6. If you purchased a hot water jetter or converted a hot water pressure washer into a jetter, jetting with hot water is

very dangerous. Be very careful not to spray hot water on you or any other person helping you.

Good Things to Know

1. The jetter nozzles are designed to draw the sewer hose into the line. However, in some cases you will need to rotate or move the hose in and out to get it through and around clogs or around corners. There is a little art to this, you will understand after jetting a few times.

2. It is best to jet from the low end of the line so the water can drain out as you go. If you are jetting from the high end of the line, you may have to stop occasionally to allow the accumulated water to drain past the jetter nozzle.

Pulse Control

1. The pulse control handle is located on the face of the pump. By turning the handle to the left, you get a steady stream of water to be used with the pressure washer gun and/or tips or the laser and rotating nozzles.

2. By turning the handle to the right, you get a pulse water flow to be used with the ram or cornering sewer nozzles.

Sewer Hose to Line Size

It's important to use the proper size hose in relationship to size line you are cleaning so the hose will feed and go around corners properly without doubling back on you.

1/8" hose should be used with 1" to 3" lines

1/4" hose should be used with 3" to 6" lines

3/8" hose should be used with 4" to 12" lines

Sewer Nozzles – What They Do

It's important to use the correct nozzle to get the job done properly.

Ram Nozzle – Used with pulse water to beat out blockages.

Laser Nozzle – Used with constant water to cut out blockages.

Cornering Nozzle – Used with pulse water to force the nozzle around corners.

Rotating Nozzle – Used with constant water after line is unclogged.

Septic Tank and Manhole Entrances

To help reach line entrances in septic tanks and manholes, you can use a piece of 2" PVC pipe with a 45° angle on the end. Make it long enough to put the 45 into the line entrance while you stand on top. Then run the jetter hose through the PVC and into the clogged line.

Don't Let It Freeze

It is best to keep your jetter in a heated area to prevent freezing, so you will not damage the pump head, hose, or other parts of your jetter. If this is not possible, you will need to do the following: Cut a 2-foot piece of garden hose with the male hose connector, so you can connect it to the female garden hose fitting on the jetter machine. Put a funnel in the other end and hold the hose upward, pouring a mixture of 50% water and 50% antifreeze into the funnel. Cycle the motor until antifreeze comes out of the water outlet. This will need to be done after every use.