

AMAZING MACHINERY

The Pressure Washer People 800-504-7435



OPERATOR'S MANUAL

**HOT WATER SINGLE AXLE TRAILER
Gas & Diesel Engine Models**

READ THIS MANUAL

This manual contains important information for the use and safe operation of your AMAZING MACHINERY™ machine. **FAILURE TO READ THIS MANUAL AND FOLLOW ITS INSTRUCTIONS PRIOR TO OPERATING OR ATTEMPTING ANY SERVICE OR MAINTENANCE PROCEDURE COULD RESULT IN SERIOUS INJURY OR DEATH TO YOU OR OTHER PERSONS; ALSO DAMAGE TO THE MACHINE OR TO OTHER PROPERTY.**

Table of Contents

SECTION 1 OPERATOR'S MANUAL

- UNPACKING.....2
- SAFETY INSTRUCTIONS AND WARNINGS.....3
- MAINTENANCE INSTRUCTIONS.....4

SECTION 2 PARTS AND SERVICE MANUAL

- OPERATING INSTRUCTIONS.....6
- WINTERIZING MACHINERY.....7
- PARTS LIST.....8
- BURNER ASSEMBLY.....9
- CONTROL BOX ASSEMBLY.....9
- HOSE, WAND, & GUN.....10
- BELT DRIVEN PUMP.....10
- WIRING DIAGRAM.....11
- PLUMBING DIAGRAMS.....12
- TROUBLESHOOTING.....13
- WARRANTY.....14

Unpacking Instructions

INSPECTION

Carefully unpack your new AMAZING MACHINERY equipment by removing the shrink wrap & banding from pallet. Remove the pressure washer from the pallet and check for any physical damages that may have occurred during shipment. Check for all parts specified and shown in figure 1.



INCLUDED PARTS

- Pallet
- Packing Material
- Outer Crate
- Hot Water Pressure Washer Trailer Unit
- Pressure Washer Accessories
- Certificate of Origin
- Operator's Manual

Figure 1

NOTICE

Information in this operator's manual is subject to change without notice.

AMAZING MACHINERY SHALL NOT BE LIABLE FOR TECHNICAL OR EDITORIAL ERRORS OR OMISSIONS CONTAINED HEREIN. This operator's manual contains information protected by copyright. No part of this operator's manual may be photocopied or reproduced in any form without prior written consent from AMAZING MACHINERY.

© AMAZING MACHINERY, 2006
All rights reserved. Printed in USA.

First Printing (April 2006)

Safety Guidelines



READ THIS FIRST! FAILURE TO READ AND OBSERVE ALL WARNING STATEMENTS COULD RESULT IN SEVERE BODILY INJURY OR DEATH, POSSIBLE INJURY TO OTHER PERSONS, DAMAGE TO MACHINE OR OTHER PROPERTY.

- DO NOT operate this machine in areas where open flames are not permitted. DO NOT store or use combustible materials on or near this machine. Use this equipment only in well ventilated areas. Failure to follow this warning may cause carbon monoxide build up, fire or explosion, and possible injury or death.
- DO NOT fill gasoline tank while engine is running. Allow engine to cool before refueling. Should gasoline be spilled, move the machine away from the area of the spill. Do not attempt to restart the machine until the gasoline has fully evaporated.
- DO NOT operate engine if air cleaner or cover directly over the carburetor air intake is removed.
- DO NOT touch hot mufflers, cylinders or fins, as contact may cause burns
- DO NOT operate this machine while under the influence of alcohol, drugs or while fatigued.
- DO NOT direct discharge stream at yourself or others. Risk of injection or injury may occur. Never put your hand or fingers over the spray tip. Do not try to stop or deflect leaks with your hand or body. Always face nozzle and wand to the ground when testing.
- DO NOT operate this machine WITHOUT wearing protective Eye Wear. Gloves, Hard Hat, Mask, Ear Plugs & Steel Toe Work Boots are also recommended, DO NOT wear loose clothing. Keep your body and clothing clear of the engine and discharge stream when the machine is running.
- DO NOT tie back or block trigger gun in OPEN position. Never leave the pressure washer unattended once you have started it. If you leave, shut down machine completely.
- DO NOT overreach or stand on an unstable support while operating this machine. Maintain good footing and balance.
- DO NOT permit this machine to run while unattended or for extended periods of time with trigger gun closed. Damage to pump may occur.
- DO NOT operate this machine in an unsafe manner or around unsupervised children. Keep all other personnel clear while operating this machine. This product should only be operated by trained personnel.
- DO NOT alter original factory settings prior to operating this machine. Risk of injury to yourself or other persons may occur.
- DO NOT remove hoses, guns, nozzles or any components while this machine is still hot or while it is running.
- DO NOT attempt to service this machine before reading the service manual.
- DO NOT use water with a temperature over 140 degrees Fahrenheit
- DO NOT use any electrical outlet that is not properly grounded or does not comply with all federal, state, and local laws and/or electrical codes
- DO NOT put diesel fuel in to a gasoline tank or gasoline into a diesel tank. Observe correct markings on fuel tanks before filling.
- DO NOT operate this machine without knowing how to stop and bleed water pressures. Know all controls before using this machine.
- DO NOT spray caustic, acids or abrasive fluids through this machine.
- DO NOT permit water to freeze inside this machine. Pump and plumbing damage may occur.
- Use only recommended Amazing Machinery™ parts when servicing this machine.
- Amazing Machinery™ will not be held liable for any unauthorized modifications made to this machine. Any such action will void the warranty.
- Although the trailer has been engineered to carry the full weight of the the equipment plus a full water tank, AMAZING MACHINERY™ recommends that the trailer only be towed with an empty tank. Failure to do so may violate state and local law; AMAZING MACHINERY is not liable for any accidental damage or fines incurred in such a situation.
- When connecting battery, ensure that the RED battery cable is connected to the POSITIVE pole on the battery and the BLACK is connected to the NEGATIVE pole on the battery

Maintenance Instructions

MAINTENANCE PRECAUTIONS

- Do not permit acidic, caustic or abrasive fluids to be pumped through system.
- Periodically clean detergent inlet screen. This will ensure proper flow of water to the pump.
- High mineral content in water may adversely affect your machine and may require the use of a water softener to ensure proper operation.
- NEVER run the pump dry under any circumstances. Doing so will cause extreme damage to the pump.



FAILURE TO MAINTAIN HEAT EXCHANGER COIL MAY RESULT IN A STEAM EXPLOSION WHICH MAY CAUSE SERIOUS INJURY OR DEATH.

HEAT EXCHANGER COIL MAINTENANCE

- Hard water conditions may eventually cause clogging in the heat exchanger coil if left unattended. Scale deposits will compromise the heating efficiency and produce an unsafe condition over time. It may be necessary to descale coil.
- Scale buildup from certain detergents may eventually clog up the heat exchanger coil causing an unsafe condition. Use only recommended detergents for better cleaning efficiency.
- Black carbon deposits that collect on the outside wall of the heat exchanger coil may be a result of using a poor grade of fuel or improper burner operation. Heating fuel should be void of water and sediments to eliminate the possibility of sooting and compromising the efficiency of the coil.

MOVING, STORAGE

- Place machine in covered area when not in use to protect from elements. Protect machine from freezing in cold temperatures by storing in a heated location.

TRAILER MAINTENANCE

- Daily: Check wheel bearings. Add grease if necessary.
- Daily: Check tires for proper inflation.
- Daily: Check trailer for loose equipment. Tighten if necessary.


ENGINE MAINTENANCE

- Every time (before start): Check oil level.
- First 8 hours: Change oil with **SAE 30W High-Detergent Oil**.
- Every 25 hours: Change oil if operating under heavy load or high ambient temperature. Service air cleaner pre-cleaner.
- Every 50 hours: Change oil. Clean and inspect spark arrester if equipped.
- Every 100 hours: Service air cleaner cartridge, replace oil filter (if equipped), Clean oil cooler (if equipped), Clean cooling system.

Maintenance Instructions

ELECTRODE SETTINGS

- Inspection of all wires, spring contacts and electrodes should be done periodically.

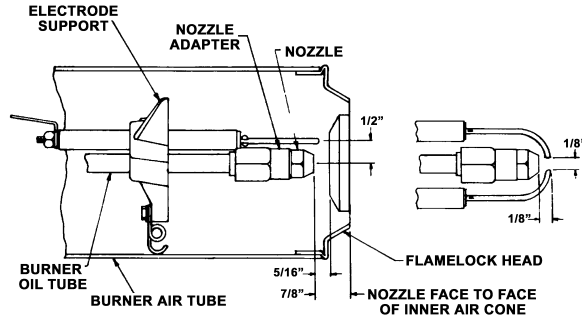




IF BLACK OR WHITE SMOKE VENTS FROM EXHAUST PORT UPON STARTING EQUIPMENT, DISCONTINUE USE AND ADJUST AIR BANDS BEFORE RESTARTING.

OIL BURNER AIR BAND ADJUSTMENT

Amazing Machinery® sets oil burners at sea level. Air bands may need adjustment at higher elevations to offer enhanced performance of the burner and extended life of the machine.

- Adjustment of burner is done with pump motor and thermostat set to maximum. Loosen locking screw on air band, then close band until black smoke vents up exhaust vent. Take careful note of air band position when black smoke is first noticed. Slowly open air band until white smoke vents, then turn air band halfway back to where black smoke was first noted. Tighten air band locking screw. When properly set, the unit should NOT have either "black" smoke or "white" smoke during operation.

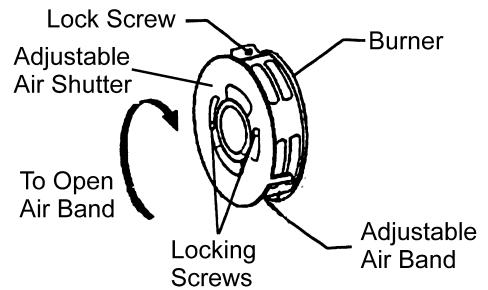

PUMP MAINTENANCE

- Fill crankcase to dot on oil gauge window per specifications with the specific oil created by the pump manufacturer (i.e. **General Pump Oil**). Ensure the right oil for specific pump as it may vary.
- Change oil after **25 Hour Break-in Period**.
- Change oil every **Three Months or at 100 Hour Intervals** thereafter.

UNLOADER ADJUSTMENT

- All Amazing Machinery machines have the unloader correctly set at the the factory. Setting an unloader is a difficult job without the proper equipment and training. Should the need arise to change the unloader settings, please contact your local distributor.

Operating Instructions

LOCATION GUIDELINES

- Locate the machine on a solid and level surface so that engine and pump crankcase oil lubricate components properly. Avoid areas where water can build up in the working area. Possible injury can occur caused by the surface becoming slippery from water build up.
- Locate the machine in a well-ventilated area and away from flammable materials or fumes. Be sure ventilation warnings are observed. Keep pressure washer at least 18" away from flammable materials.
- Locate the machine so the operator has easy access to the jetter/pressure washer and its controls. Locate the machine so that it is protected from external damage.
- To prevent damage and excessive hose wear, locate the unit so that the hose does not cross traffic areas.

STARTING THE MACHINE

Following the steps below will insure successful operation:

- Read this manual completely before attempting to start the machine.
- Check the fuel tank and fill with a good grade of gasoline (87 octane minimum) for gas engines and a high quality diesel fuel for diesel engines.
- Check the engine oil level and fill with SAE 30 weight *high-detergent* oil.
- Check the pump oil level and fill with SAE 30w *non-detergent* oil if needed.
- Check water tank to ensure adequate level of water required for the job.
- Pull trigger on gun until a steady stream of water comes out the nozzle. This purges any air in the system.
- Slide fuel switch to the RIGHT and slide choke switch to the LEFT (closed position).
- Turn ON/OFF switch (on engine) to "ON".
- Open water flow to reduce back pressure in pump. Back pressure can overpower electric starter, preventing ignition.
- Turn key to start gas engine and allow RPM to develop.
- Let engine warm up for approximately 30 seconds and slide choke to "OPEN" position.
- Check for leaks in the system and cycle trigger gun to insure bypass is adjusted correctly. Repair any leaks and correct unloader adjustment if needed. Turn off machine before attempting any repairs.
- WARNING - Do not operate machine with less than 6" of water in the tank. Doing so may cause pump damage!

STOPPING THE MACHINE

- Turn engine to "OFF".
- Pull gun trigger to release water pressure from system.
- Disconnect wand & gun assembly.
- Wind up pressure hose on hose reel.


CAUTION

- Always wear protective safety gear, such as, but not limited to, rain coat or coveralls, rubber boots, face shield or goggles, gloves and hearing protection.
- Do not run the machine for more than two minutes with the jetter water flow shut off (by-pass mode). This will over heat the jetter pump and could cause injury to you.
- Do not run hot water thru this pump. Hot water will damage the pump, and will void the warranty.

WINTERIZING MACHINERY

WINTERIZING WITHOUT OPTIONAL ANTIFREEZE KIT


- Run the machine to run all the water out of the tank.
- Ensure tank is empty.
- Pour antifreeze mixture into water tank.
- Make sure all other valves are open.
- Start engine.
- Flow antifreeze thru pump, all lines, and all hose reels, ensuring there is no water left in the system.

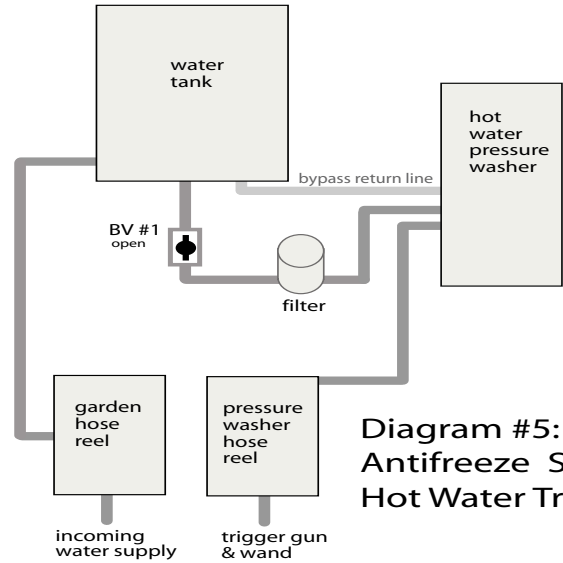

**Diagram #5:
Antifreeze Settings
Hot Water Trailer**


WINTERIZING WITH OPTIONAL ANTIFREEZE KIT

- Turn the tank dump ball valve (BV#3) to the "OPEN" position and drain tank.
- After draining, turn ball valves water supply ball valve (BV#2) to the "CLOSED" position
- Ensure there is antifreeze mixture in antifreeze tank.
- Turn the tank antifreeze tank ball valve (BV#1) to the "OPEN" position
- Start engine.
- Flow antifreeze thru pump, all lines, and all hose reels, ensuring there is no water left in the system.

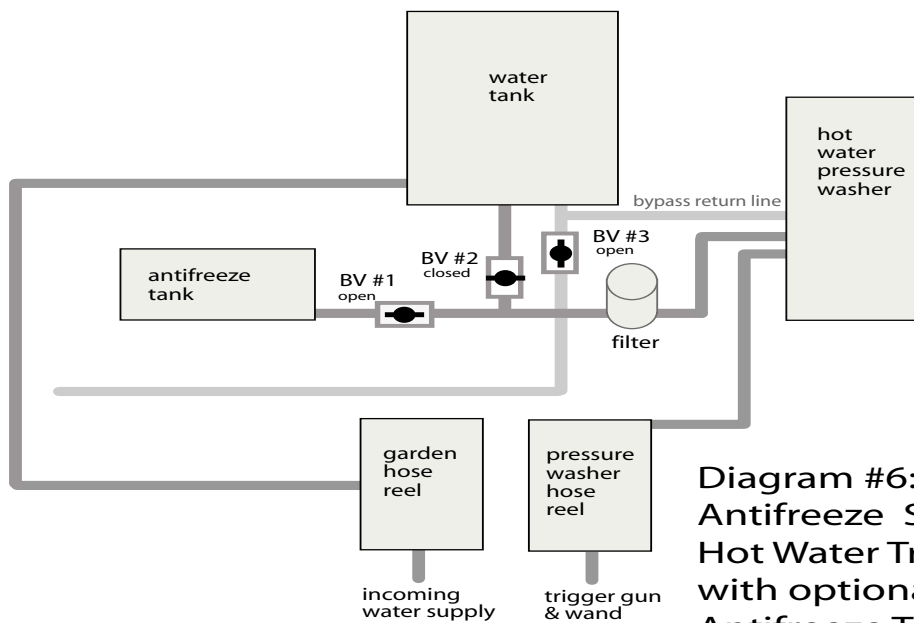


**Diagram #6:
Antifreeze Settings
Hot Water Trailer
with optional
Antifreeze Tank**

NH Parts List

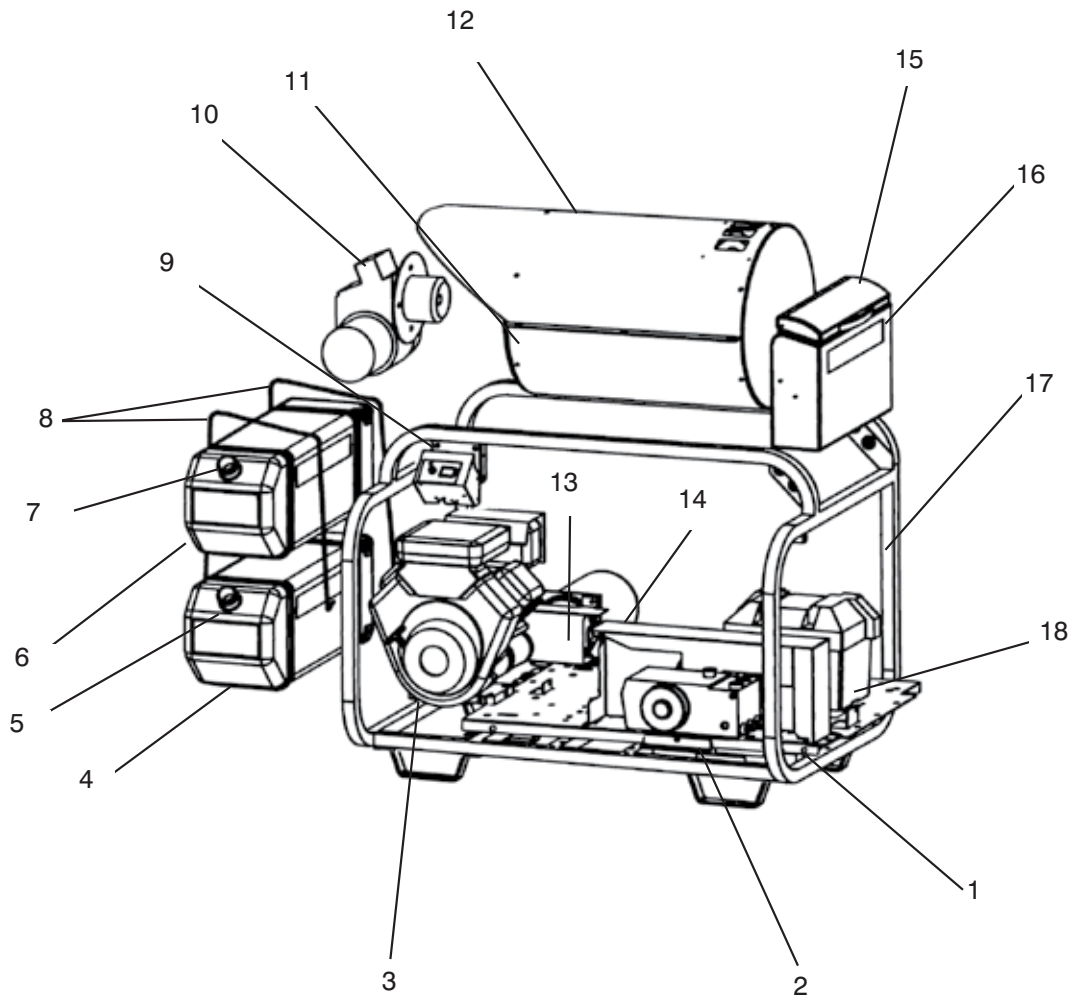

Ref.#	Part#	Description	Qty.
1.	180-00321-01	Belt Guard	1
2.	220-00009-01	Pump, General TS2021-R	1
3.	206-00006-01	Engine, Gas, 16hp, B&S 303447-1075-E1	1
3a.	206-00023-01	Engine, Gas, 18hp, B&S 350447-1075-E1	1
3b.	206-00029-01	Engine, Gas, 21hp, B&S 381447-0075-E1	1
4.	190-00001-02	Tank, Fuel, 10 Gal, Red	1
5.	140-00002-01	Cap, Fuel, Guage, Gas, Red	1
6.	190-00001-01	Tank, Fuel, 10 Gal, Green	1
7.	140-00001-01	Cap, Fuel, Guage, Diesel, Black	1
8.	180-00261-01	Torsion Rods, Dual Fuel Tank	2
9.	180-00270-01	Contral Box	1
10.	250-00003-02	Burner Assy, Oil, EH-H-115 (110V Models)	1
10a.	250-00006-02	Burner Assy, Oil, MSR-H-12	1
11.	180-00255-01	Shell, SS, Bottom	1
12.	180-00256-01	Shell, SS, Top	1
13.	180-00172-01	Generator Belt Guard, (110V Models)	1
14.	216-00001-01	Generator, Voltmaster AB-25 (110V Models)	1
15.	190-00003-02	Tank, Float, Lid	1
16.	190-00003-01	Tank, Float, Base	1
17.	180-00319-01	Frame,	1
18.	590-00001-01	Box, Battery, Vented, Black, w / Hardware	1
	180-00320-01	Plate, Power, Motor Mounting (not shown)	1

NH Burner Assembly

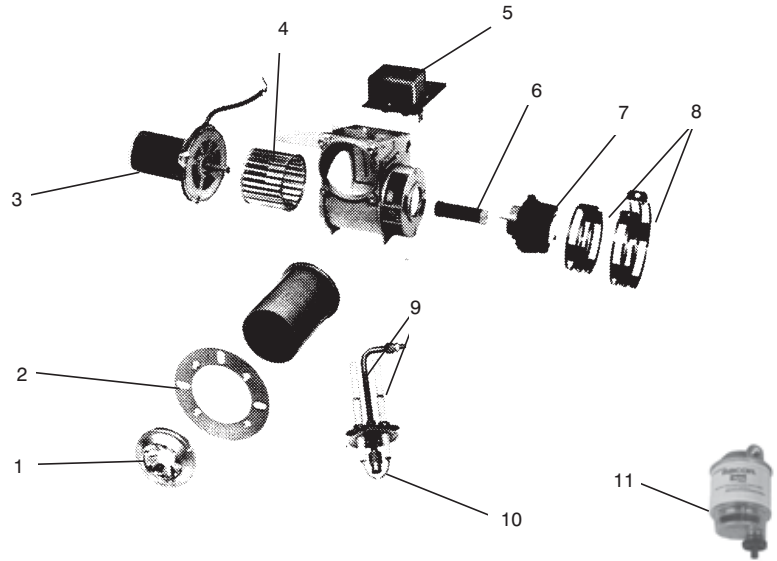


Ref#	Part #	Description	Qty
1	256-00001-02	Main Burner Gasket	1
2	253-00002-01	Fan Wheel 3.44" x 4.25"	1
3	254-00001-04	Motor, 12v DC	1
3a		Motor, Flange	1
4	252-00001-04	Ignitor	1
5	253-00001-01	Coupling	1
6	251-00001-01	Fuel Pump Suntec	1
7	245-00006-16	Fuel Nozzle 2.25 80°	1
8	258-00002-03	Electrodes	1pr
9	577-00003-01	Filter, Fuel Inline Racor	1
	578-00001-01	Element, Fuel Filter, Racor	1


Burner Assembly Complete

250-00006-01 MSR-H-12 Wayne 12 Volt Burner

NH Control Box Assembly

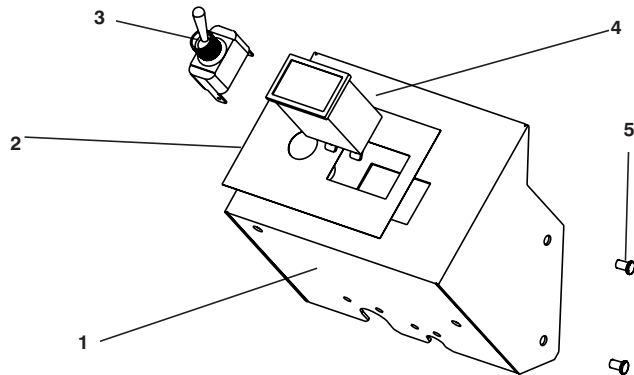

Ref.#	Part #	Description	Qty.
1	180-00027-01	Control Box	1
2	305-00006-01	Label,Control Box	1
3	450-00001-01	Burner Switch On/Off	1
4	573-00001-01	571-00002-01 Hourmeter (optional)	1
5	508-00002-02	Self-tapping Screws	4

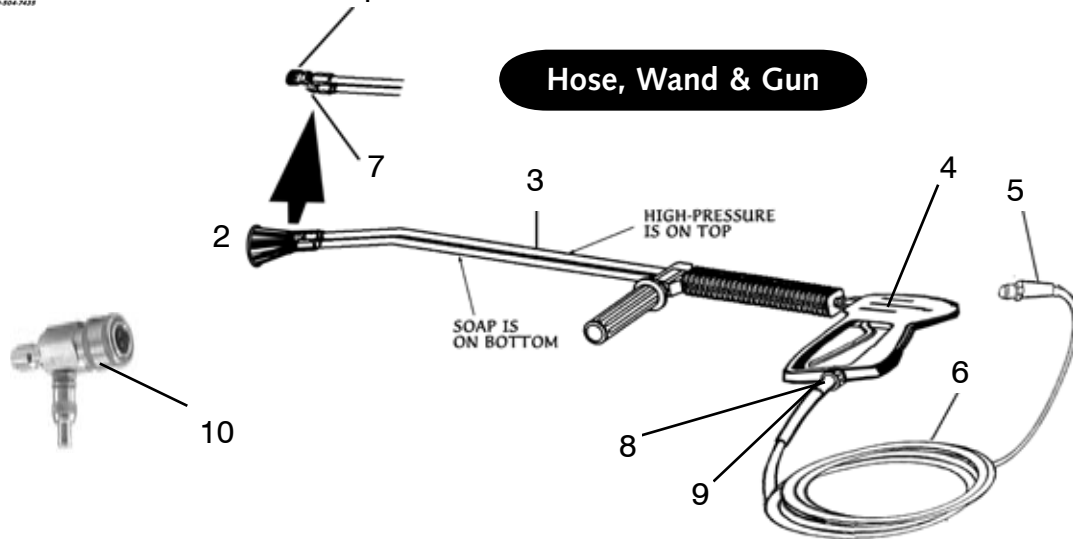

Ref#	Part#	Description	Qty
1.	270-00005-01	Nozzle, Water, #5.5, 0° Quick Connect (16,18 HP)	1
1a.	270-00005-02	Nozzle, Water, #5.5, 15° Quick Connect (16,18 HP)	1
1b.	270-00005-03	Nozzle, Water, #5.5, 25° Quick Connect (16,18 HP)	1
1c.	270-00005-04	Nozzle, Water, #5.5, 40° Quick Connect (16,18 HP)	1
1d.	270-00004-01	Nozzle, Water, #5.0, 0° Quick Connect (21 HP)	1
1e.	270-00004-02	Nozzle, Water, #5.0, 15° Quick Connect (21 HP)	1
1f.	270-00004-03	Nozzle, Water, #5.0, 25° Quick Connect (21 HP)	1
1g.	270-00004-04	Nozzle, Water, #5.0, 40° Quick Connect (21 HP)	1
2.	554-00006-02	Quick Coupler Socket, 1/4" Male	1
3.	265-00002-01	Dual Wand, Insulated	1
4.	275-00001-01	Gun	1
5.	552-00004-03	Quick Coupler Plug, 3/8"	1
6.	284-00001-01	Hose Assembly, 50', 3000PSI @ 250°F	1
6a.	284-00002-01	Hose Assembly, 50', 5000PSI @ 250°F (18,21 HP)	1
7.	270-00038-01	Nozzle, Soap	1
8.	552-00003-03	Quick Coupler Plug, 3/8 nptm (not shown)	1
9.	554-00007-03	Quick Coupler Socket, 3/8 nptf (not shown)	1
10.	020-00005-01	Downstream Injector Kit (hose not shown)	1

NH DELUXE KIT

284-00001-01	Hose assy,50',3000PSI@250F,swivels	1
265-00001-01	Wand,36",insulated,JE5170D36	1
565-00003-01	O-ring,for 1/4"QC,Buna, -110	6
565-00003-02	O-ring,for 3/8"QC,Buna, -112	6
270-00110-02	Nozzle,Rotating,GP Rotomax 5.0,#2 Blue	1
554-00007-02	QC coupler socket,brs,1/4",nptf	1
552-00004-02	QC plug,sp.1/4",nptf	1
552-00003-02	QC plug,sp.1/4",nptm	1
552-00004-03	QC plug,sp.3/8",nptf	1
554-00007-03	QC coupler socket,brs,3/8",nptf	1

NH Belt Drive Pumps

General Pump TS2021-R Triplex Plunger Pump




Pump Repair Parts

Ref#	Part#	Description	Qty
1.	220-00009-01	Pump, Complete, General TS2021-R	1
2.	221-00001-03	Manifold, Brass Head TS2021	1

Pump Repair Kits (not shown)



Part #	Description	Qty
221-00021-01	Check Valve Assembly Kit # 1 (6 Each)	1
221-00020-01	Oil Seals, Kit # 2 (3 Oil Seals)	1
221-00019-01	Valve Cap and O-Ring, Kit # 16 (6 Each)	1
221-00023-01	V-Packing, Kit # 69 (3 Each)	1
221-00031-01	Plunger, 20MM	3

NH Wiring Diagram

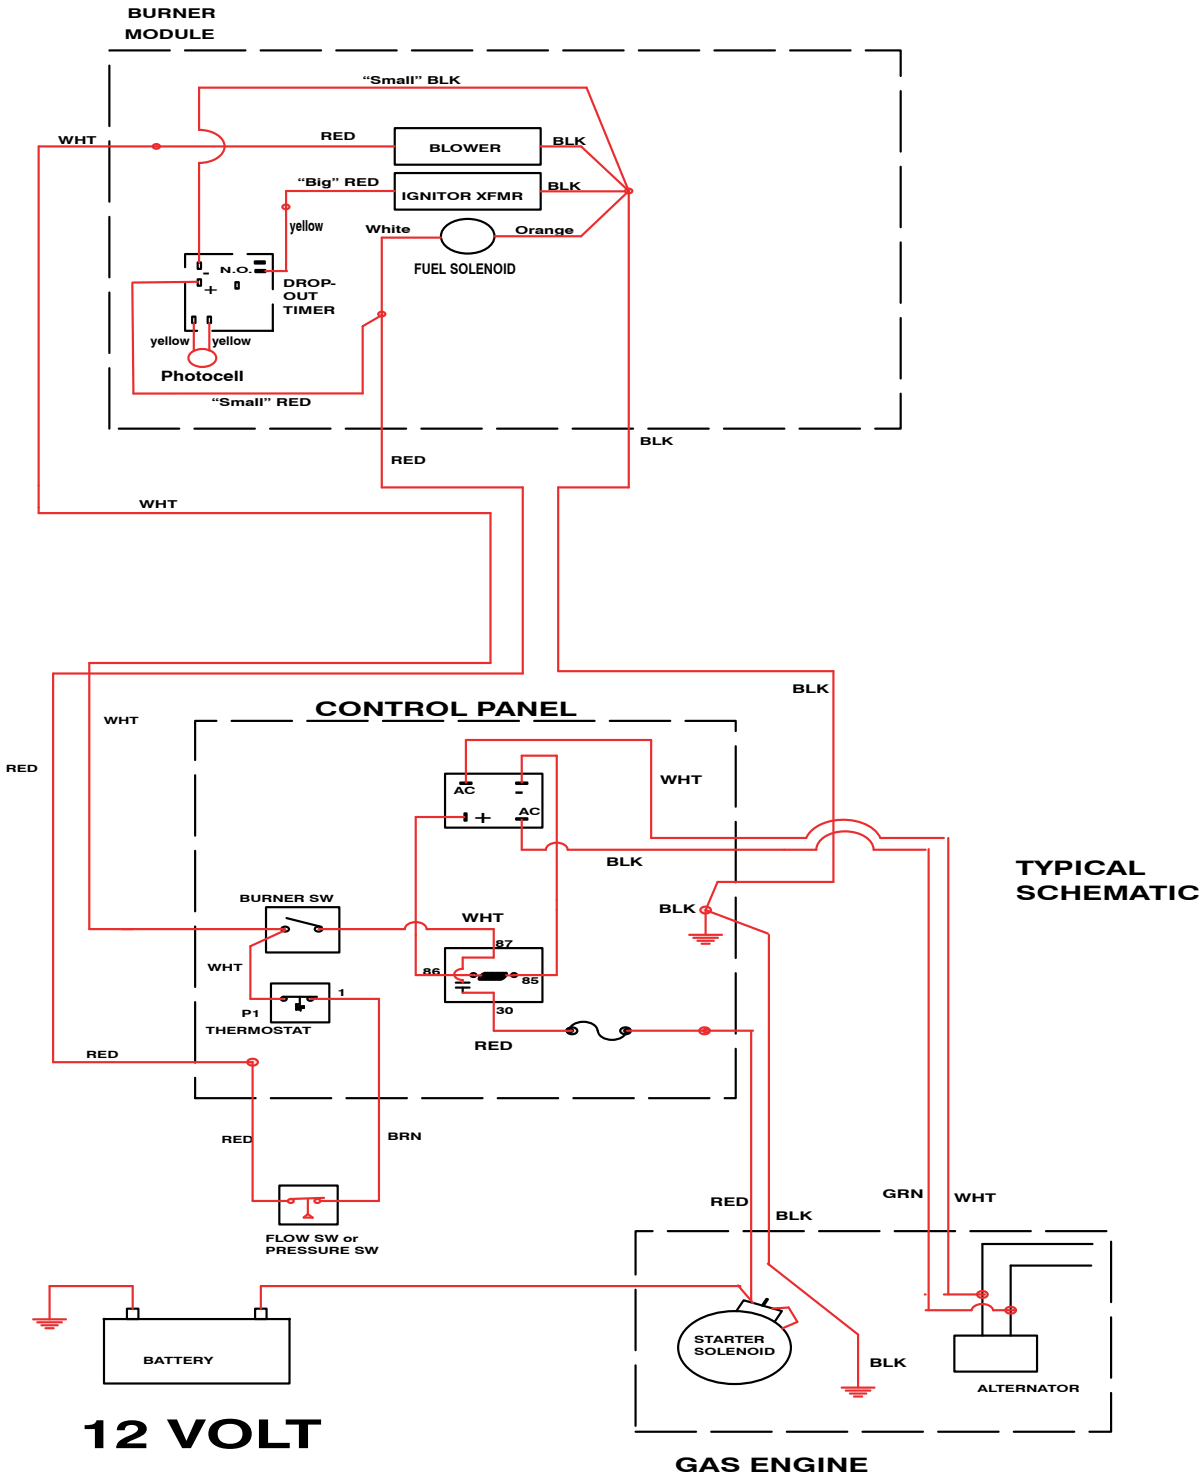

**12 VOLT
Electrical
Schematic**

NH Pump Plumbing

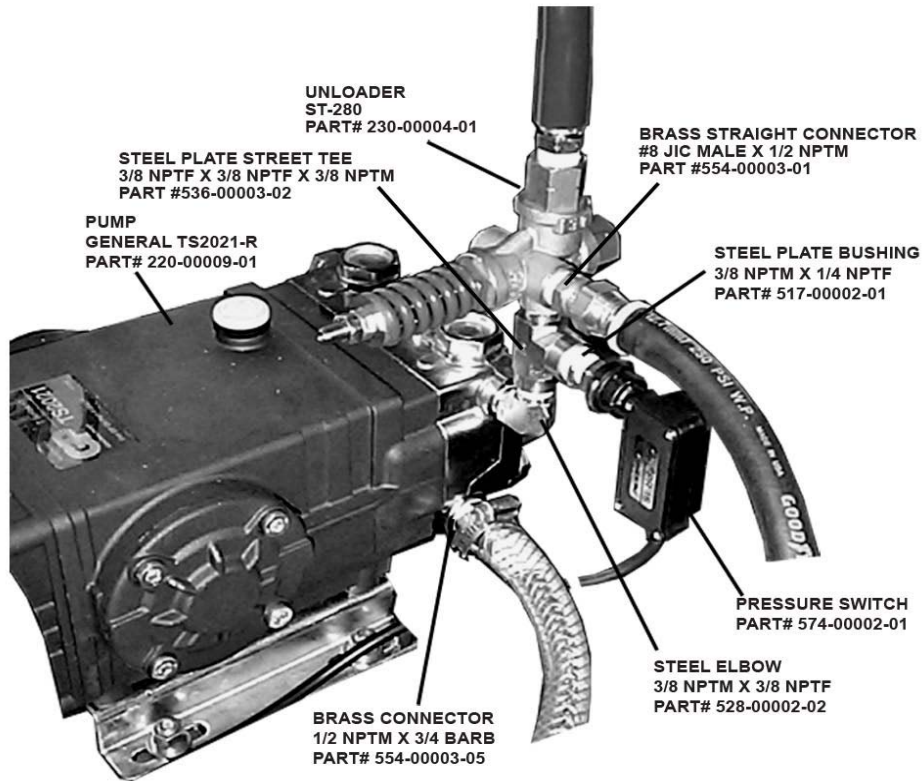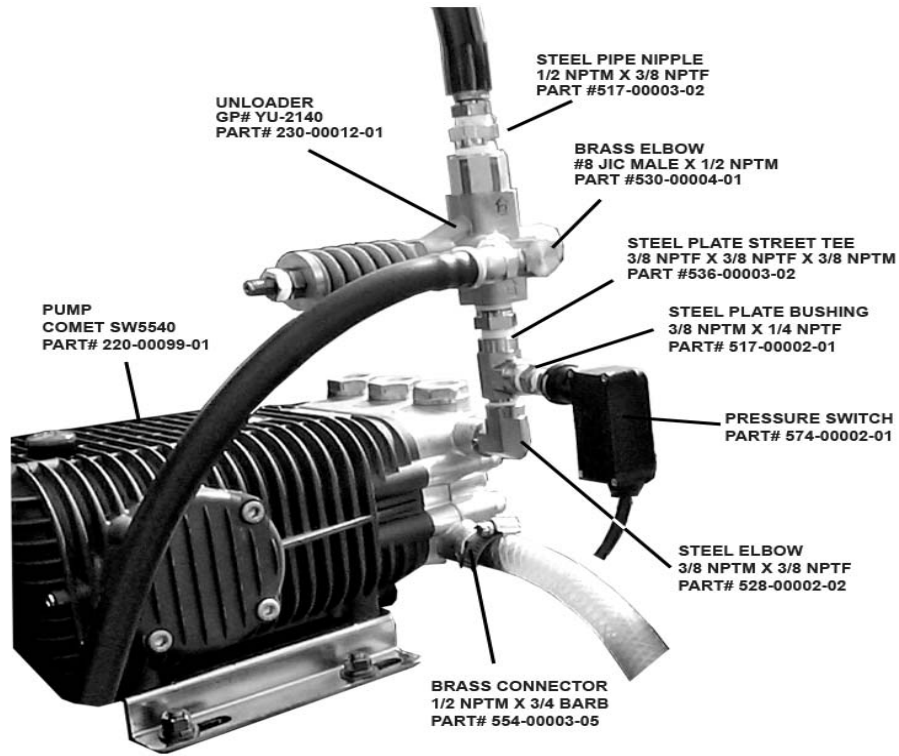

Troubleshooting

problem	cause	action
Low Water Pressure	Insufficient water source Old or incorrect nozzle Plumbing or hose leak Obstruction in spray nozzle Chemical valve open Unloader valve worn Pump valves dirty or worn	Check hose size/water source Replace nozzle Tighten, repair or replace leak Clean or replace nozzle Close valve or submerge hose Replace unloader Clean or replace packing/valves
No Chemical Flow	Detergent valve closed Low detergent level Chemical screen dirty	Open detergent valve Fill detergent container Clean detergent screen
Pressure Relief Valve Leaks	Nozzle is dirty Defective relief valve Unloader adjusted incorrectly Restriction on discharge hose Scale restricting flow in coil	Clean or replace nozzle Replace relief valve Adjust unloader valve Remove nozzle and flush line Clean coil
Pump Motor Not Running	Pump motor switch off GFCI tripped No voltage to machine Clogged water nozzle Insufficient voltage/amperage	Turn on pump motor switch Reset and test GFCI Check power source Clean water nozzle Use proper drop cord
Pump Noisy	Air in suction line Pump valves dirty Check valve springs worn Low pump oil Pump bearings are worn Incoming water too hot	Check inlet water fittings Clean/replace pump valves Replace check valves Add SEA 30wt. non-detergent Replace/rebuild pump Reduce temperature/ambient
Water In Oil	High humidity environment Oil seal worn Plunger packing worn	Change oil frequently Check and replace oil seal Check and replace packing
Water Dripping/Pump	Plunger packing is worn Plunger retainer oil ring worn Cracked ceramics	Install new packing kit Replace oil ring Replace ceramics
Oil Dripping	Oil seal worn Cracked manifold	Check and replace oil seals Replace manifold
Fluctuating Pressure	Unloader not adjusted Valves worn Dirt or blockage in valve Pump sucking air Worn plunger packing	Adjust to specifications Replace with valve kit Clean or replace valve Check water/detergent supply Replace packing kit
Pump Head Overheating	Extended period in bypass	Pull trigger gun for water flow

WARRANTY

MANUFACTURER LIMITED WARRANTY

ENGINES

Honda GC Series Engines; ONE Year from date of purchase Honda will repair or replace any manufacturer defect at their expense. To be handled directly by Honda Service Centers. See owners manual for details.

Honda GX Series Engines; TWO years from date of purchase Honda will repair or replace any manufacturer defect at their expense. To be handled by Honda Service Centers. See owners Manual for details.

Vanguard Series Engines; TWO years from date of purchase Briggs and Stratton will repair or replace any manufacturer defect at their expense. To be handled by Briggs and Stratton Service Centers. See owners Manual for details.

Robin Series Engines; TWO years from date of purchase Robin/Subaru will repair or replace any manufacturer defect at their expense. To be handled by Robin/Subaru Service Centers. See owners Manual for details.

Yanmar Diesel Engines; TWO years from date of purchase Yanmar will repair or replace any manufacturer defect at their expense. To be handled by Yanmar Service Centers. See owners Manual for details.

ELECTRIC MOTORS

Marathon and Baldor brand electric motors have a manufacture limited warranty of one year from purchase date to repair or replace the motor, at their options, any manufacturing defects.

The limited warranty does not include damage from low voltage or amperage use, high voltage or amperage use, water, or any other operator incurred damage.

PUMPS

Pump manufacturers offer a "one and five" limited warranty on tri-plex ceramic plunger type pumps, from date of purchase.

The body, head and power train of the pump is warranted for 5 years from date of purchase against manufacturer defects. See owners manual for details. The valves, packings and "o"rings are warranted for one year from date of purchase against manufacturer defects. See owners manual for details. Pump manufacturers offer a one year limited warranty on Axial Type pumps from date of purchase. See owners manual for details.

NOTE - Over Heated Pumps void all warranties.

ACCESSORY PARTS

Including, but not limited to; unloader valve, thermal relief valve, reels, easy start valve, chemical injector, rotating nozzles, spray tips, spray guns, wand extensions, telescoping wands, ball valves, sand injectors, quick couplers, high pressure hose, ground fault interrupter; all burner electronics and wiring, flow switches, diesel fuel injectors are warranted for repair or replacement by Equipment Manufacturer for a period of 90 days from date of purchase. Including, but not limited to; Surface Cleaners, Becket or Wayne Burners, Burner Fans and Heater Coils warranted against manufacture defects for repair or replacement by Equipment Manufacturer for a period of one (1) year from date of purchase. Including, but not limited to; Cart or Frame warranted against manufacture defects for repair or replacement by Equipment Manufacturer for a period of one (1) year from date of purchase.

LIMITATION OF LIABILITY

Amazing Machinery and Equipment Manufacturer liability for special, incidental, or consequential damages is expressly disclaimed. In no event shall any liability exceed the purchase price of the product in question. The warranty contained herein is in lieu of all other warranties express or implied, including any implied warranty of fitness for particular purpose.

NOTE - It is understood that a manufacturers limited warranty pertains to equipment used in it's prescribed manner, without abuse, and does not include wear and tear.

NOTE - All freight charges incurred on warranty situations are the responsibility of the customer.

Specifications, Warranties and Pricing are subject to change without notice.

*Refund does not include shipping/handling fees. No refund will be given for installation kits. Customer is responsible for lost or misdirected packages. It is recommended that the customer insure the package for its full retail value. This warranty does not cover or include any damage as a result of acts of God, improper installation, alteration, negligence or abuse.