

PDZ1240
Single Direction
Vibratory Asphalt Plates
Owner's Manual



SAVE THIS MANUAL FOR FUTURE REFERENCE

This manual provides information regarding the operation and maintenance of these products. We have made every effort to ensure the accuracy of the information in this manual. We reserve the right to change this product at any time without prior notice.

Please keep this manual available to all users during the entire life of the Vibratory.

TABLE OF CONTENTS

1. Foreword	3
2. Safety Information	3
2.1 Laws Pertaining to Spark Arresters	4
2.2 Operating Safety	4
2.3 Operator Safety while using Internal Combustion Engines ..	5
2.4 Service Safety	6
2.5 Label Locations	7
2.6 Warning and Informational Labels	8
2.7 Operating Labels	9
3. Technical Data	11
3.1 Engine Data	11
3.2 Machine Data	11
3.3 Sound and Vibration Specifications	11
3.4 Dimensions	12
4. Operation	13
4.1 Recommended Fuel	13
4.2 Before Starting	13
4.3 To Start	13
4.4 To Stop	14
4.5 Application	14
4.6 Operation	14
5. Maintenance	16
5.1 Periodic Maintenance Schedule	16

5.2 Cleaning Plate	16
5.3 Drive Belt	16
5.4 Spark Plug	17
5.5 Engine Oil	18
5.6 Air Cleaner	19
5.7 Cleaning Sediment Cup	20
5.8 Adjusting Engine Speed	21
5.9 Carburetor Adjustment	21
5.10 Exciter Lubrication	22
5.11 Troubleshooting	23
5.12 Storage	24
5.13 Lifting Machine	24
5.14 Transporting Machine	25
5.15 Parts List	26



WARNING: Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

1. Foreword

This manual provides information and procedures to safely operate and maintain the model. For your own safety and protection from injury, carefully read, understand and observe the safety instructions described in this manual.

Keep this manual or a copy of it with the machine. If you lose this manual or need an additional copy, please contact our Corporation. This machine is built with user safety in mind; however, it can present hazards if improperly operated and serviced. Follow operating instructions carefully! If you have questions about operating or servicing this equipment, please contact us.

The information contained in this manual was based on machines in production at the time of publication. We reserves the right to change any portion of this information without notice.

All rights, especially copying and distribution rights are reserved.

2. Safety Information

This manual contains DANGER, WARNING, CAUTION, and NOTE callouts which must be followed to reduce the possibility of personal injury, damage to the equipment, or improper service.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION: Used without the safety alert symbol, CAUTION indicates a

potentially hazardous situation which, if not avoided, may result in property damage.

Note: *Contains additional information important to a procedure.*

2.1 Laws Pertaining to Spark Arresters

Notice: State Health Safety Codes and Public Resources Codes specify that in certain locations spark arresters be used on internal combustion engines that use hydrocarbon fuels. A spark arrester is a device designed to prevent accidental discharge of sparks or flames from the engine exhaust. Spark arresters are qualified and rated by the United States Forest Service for this purpose.

In order to comply with local laws regarding spark arresters, consult the engine distributor or the local Health and Safety Administrator.

2.2 Operating Safety



WARNING: Familiarity and proper training are required for the safe operation of equipment! Equipment operated improperly or by untrained personnel can be dangerous! Read the operating instructions contained in both this manual and the engine manual and familiarize yourself with the location and proper use of all controls. Inexperienced operators should receive instruction from someone familiar with the equipment before being allowed to operate the machine.

- 2.2.1 **NEVER** allow anyone to operate this equipment without proper training. People operating this equipment must be familiar with the risks and hazards associated with it.
- 2.2.2 **NEVER** touch the engine or muffler while the engine is on or immediately after it has been turned off. These areas get hot and may cause burns.
- 2.2.3 **NEVER** use accessories or attachments that are not recommended by us. Damage to equipment and injury to the user may result.
- 2.2.4 **NEVER** operate the machine with the belt guard missing. Exposed drive belt and pulleys create potentially dangerous hazards that can cause serious injuries.
- 2.2.5 **NEVER** leave machine running unattended.
- 2.2.6 **ALWAYS** be sure operator is familiar with proper safety precautions and operation techniques before using machine.
- 2.2.7 **ALWAYS** wear protective clothing appropriate to the job site when operating equipment.
- 2.2.8 **ALWAYS** wear hearing protection when operating equipment.

- 2.2.9 **ALWAYS** close fuel valve on engines equipped with one when machine is not being operated.
- 2.2.10 **ALWAYS** store equipment properly when it is not being used. Equipment should be stored in a clean, dry location out of the reach of children.
- 2.2.11 **ALWAYS** operate machine with all safety devices and guards in place and in working order. **DO NOT** modify or defeat safety devices. **DO NOT** operate machine if any safety devices or guards are missing or inoperative.
- 2.2.12 **ALWAYS** read, understand, and follow procedures in Operator's Manual before attempting to operate equipment.

2.3 Operator Safety while using Internal Combustion Engines



DANGER: Internal combustion engines present special hazards during operation and fueling! Read and follow warning instructions in engine owner's manual and safety guidelines below. Failure to follow warnings and safety guidelines could result in severe injury or death.

- 2.3.1 **DO NOT** run machine indoors or in an enclosed area such as a deep trench unless adequate ventilation, through such items as exhaust fans or hoses, is provided. Exhaust gas from the engine contains poisonous carbon monoxide gas; exposure to carbon monoxide can cause loss of consciousness and may lead to death.
- 2.3.2 **DO NOT** smoke while operating machine.
- 2.3.3 **DO NOT** smoke when refueling engine.
- 2.3.4 **DO NOT** refuel hot or running engine.
- 2.3.5 **DO NOT** refuel engine near open flame.
- 2.3.6 **DO NOT** spill fuel when refueling engine.
- 2.3.7 **DO NOT** run engine near open flames.
- 2.3.8 **ALWAYS** refill fuel tank in well-ventilated area.
- 2.3.9 **ALWAYS** replace fuel tank cap after refueling.
- 2.3.10 **ALWAYS** check fuel lines and fuel tank for leaks and cracks before starting engine. Do not run machine if fuel leaks are present or fuel lines are loose.


2.4 Service Safety



WARNING: Poorly maintained equipment can become a safety hazard! In order for the equipment to operate safely and properly over a long period of time, periodic maintenance and occasional repairs are necessary.

- 2.4.1 **DO NOT** attempt to clean or service machine while it is running. Rotating parts can cause severe injury.
- 2.4.2 **DO NOT** crank a flooded engine with the spark plug removed on gasoline-powered engines. Fuel trapped in the cylinder will squirt out the spark plug opening.
- 2.4.3 **DO NOT** test for spark on gasoline-powered engines, if engine is flooded or the smell of gasoline is present. A stray spark could ignite fumes.
- 2.4.4 **DO NOT** use gasoline or other types of fuels or flammable solvents to clean parts, especially in enclosed areas. Fumes from fuels and solvents can become explosive.
- 2.4.5 **ALWAYS** keep area around muffler free of debris such as leaves, paper, cartons, etc. A hot muffler could ignite them, starting a fire.
- 2.4.6 **ALWAYS** replace worn or damaged components with spare parts designed and recommended by us.
- 2.4.7 **ALWAYS** disconnect spark plug on machines equipped with gasoline engines, before servicing, to avoid accidental start-up.
- 2.4.8 **ALWAYS** keep machine clean and labels legible. Replace all missing and hard-to-read labels. Labels provide important operating instructions and warn of dangers and hazards.


 


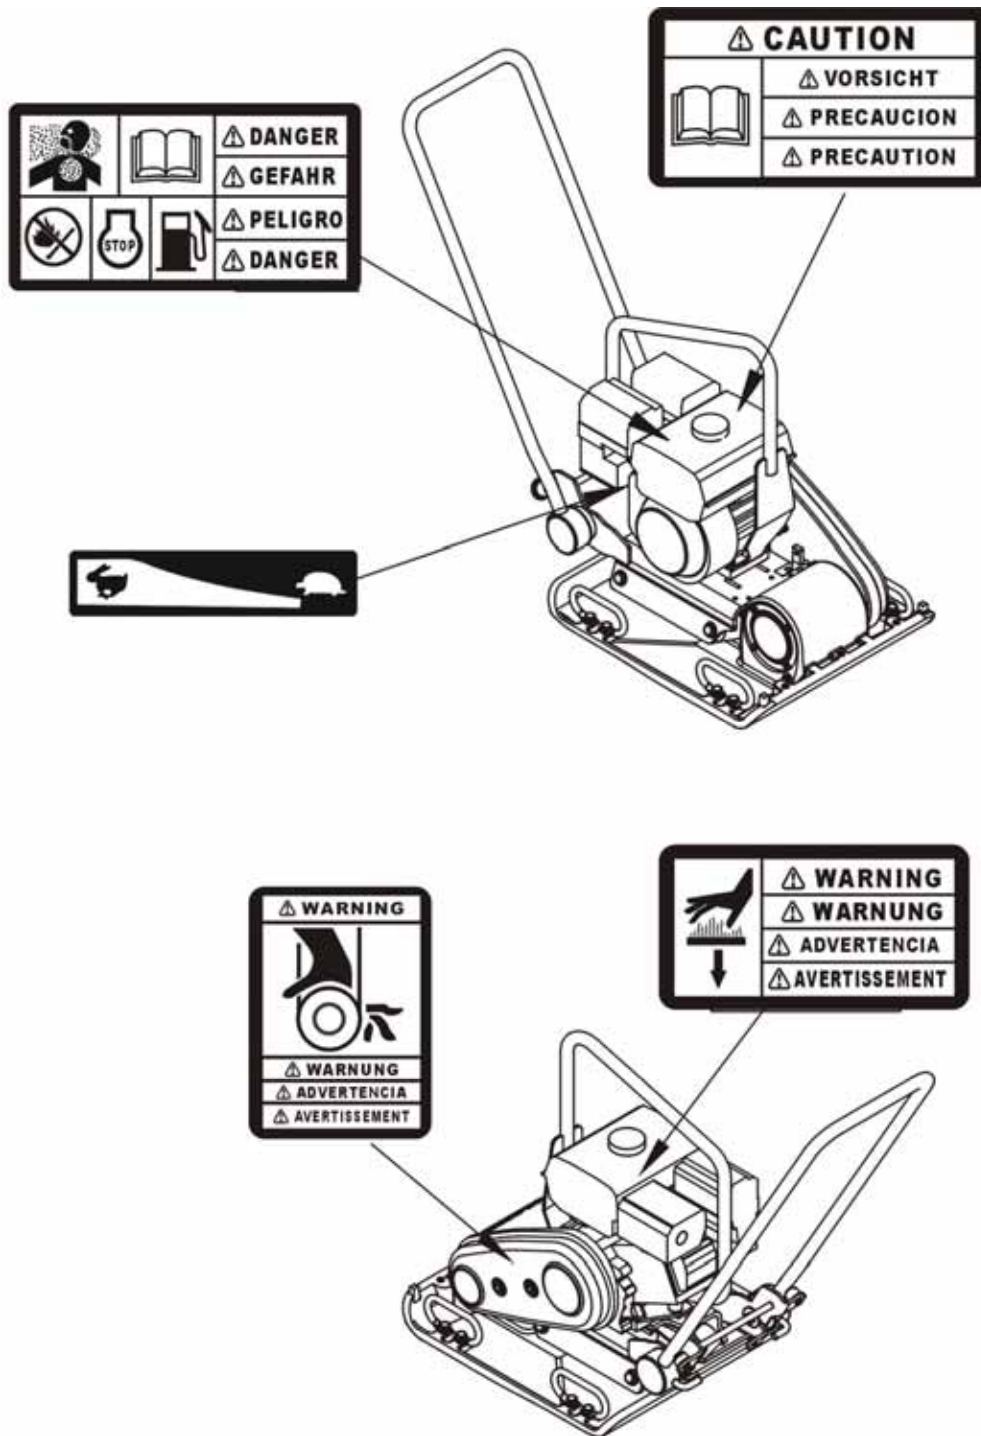

2.5 Label Locations



Graphic 1








2.6 Warning and Informational Labels




This machines use international pictorial labels where needed. These labels are described below:

Label	Meaning
	<p>To prevent hearing loss, wear hearing protection when operating this machine.</p>
	<p>Read the operator's manual for machine information.</p>
	<p>WARNING! Hot surface.</p>
	<p>WARNING! Hand injury if caught in moving belt. Always replace belt guard.</p>
	<p>CAUTION! Read and understand the supplied operator's manual before operating this machine. Failure to do so increases the risk of injury to yourself or others.</p>
	<p>DANGER! Engines emit carbon monoxide; operate only in well ventilated area. Read the operator's manual. No sparks, flames or burning objects near machine. Shut off engine before refueling.</p>

2.7 Operating Labels

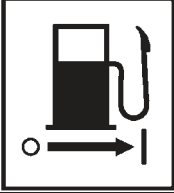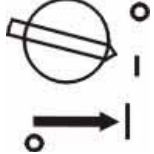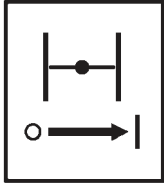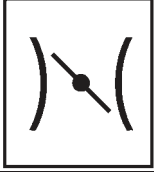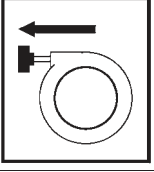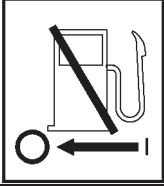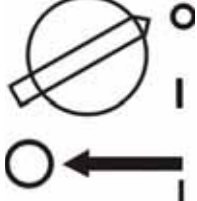This machines use international pictorial labels where needed. These labels are described below:

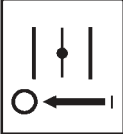Label	Meaning
	Open fuel flow valve.
	Push or turn engine switch to ON position.
	Close choke.
	Place throttle in the IDLE position.
	Pull rewind starter.
	Close fuel flow valve.
	Push or turn engine switch to OFF position.

Label		Meaning
		Open choke.
		Place throttle in the FAST position.
		Throttle control lever: Rabbit = Full or Fast Turtle = Idle or Slow

3. Technical Data

3.1 Engine Data

Model		PDZ1240
Engine Model		168F
Rated Power	kW (Hp)	4.8 (6.5)
Engine Speed - full	rpm	3600 ± 100
Engine Speed - idle	rpm	1400 ± 100
Valve Clearance (cold)	mm (in.)	Inlet: 0.15 (0.006) Outlet: 0.20 (0.008)
Air Cleaner	type	Dual Element
Engine Lubrication		SAE 10W30 SG, SF or SE
Engine Oil Capacity	L (oz.)	0.6 (20)
Fuel	type	Regular unleaded gasoline
Fuel Tank Capacity	L (qts.)	3.6 (4.0)
Spark Plug	type	(NGK) BPR 6ES, F7RTC
Electrode Gap	mm (in)	0.7-0.8 (0.028-0.031)

3.2 Machine Data

Model		PDZ1240
Plate		
Operating Weight	kg (lbs.)	70 (154)
Exciter Speed	rpm / belt	5600 ± 100
Climb Ability		0~20°
Exciter Lubrication		Shell Alvania #2 grease

3.3 Sound and Vibration Specifications

The required sound specifications, per Appendix 1, Paragraph 1.7.4.f of the EC-Machine Regulations, are:

* The sound pressure level at operator's location (LpA) = 98 dB(A)

* The sound power level (LWA) = 108 dB(A)


These sound values were determined according to ISO 3744 for the sound power level (LWA) and ISO 6081 for the sound pressure level (LpA) at the operator's location.

The weighted effective acceleration value, determined according to ISO 8662 Part 1, is: 3.2 m/s².

The sound and vibration specifications were obtained with the unit operating on crushed gravel at nominal engine speed.

3.4 Dimensions

Mm (in.)

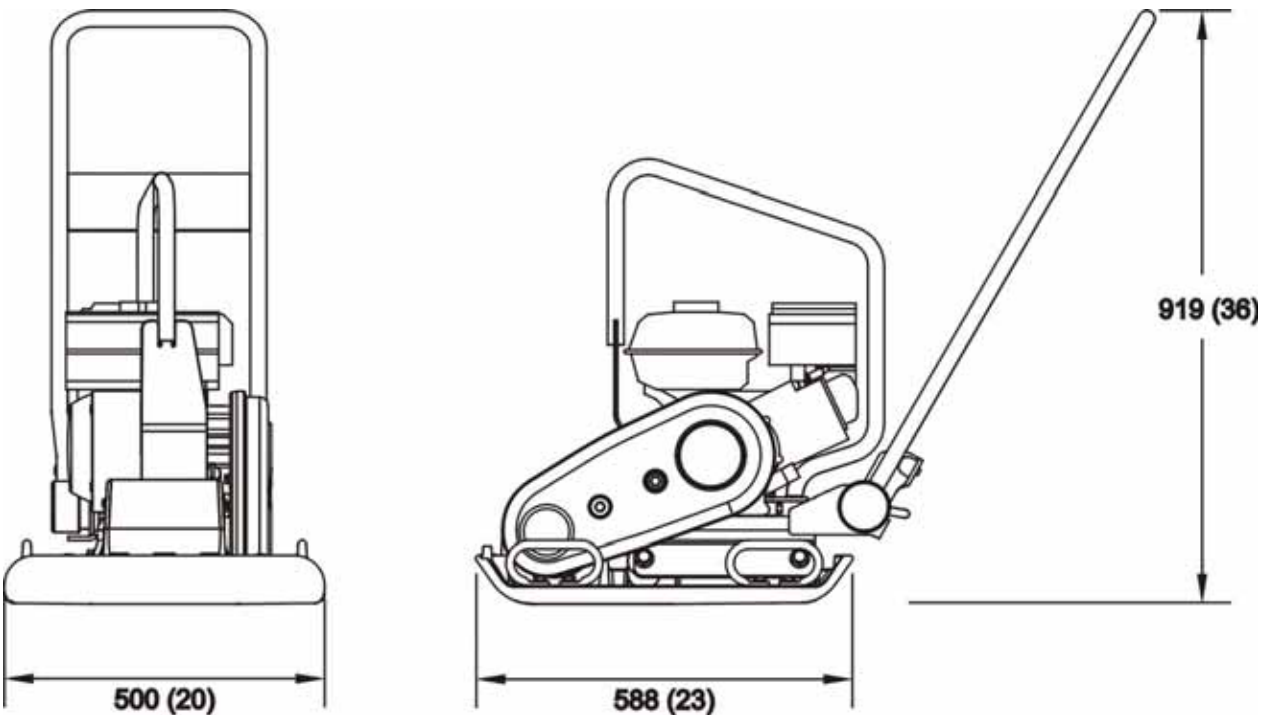

Graphic 2

4. Operation

4.1 Recommended Fuel

The engine requires regular grade unleaded gasoline. Use only fresh, clean gasoline. Gasoline containing water or dirt will damage fuel system. Consult engine owner's manual for complete fuel specifications.

4.2 Before Starting

4.2.1 Read and understand safety and operating instructions at beginning of this manual.

4.2.2 Check:

- Oil level in engine.
- Fuel level.
- Condition of air cleaner.
- Tightness of external fasteners.
- Condition of fuel lines.

4.3 To Start

See Graphic 3

4.3.1 Open fuel valve by moving lever to the right (**a1**).

Note: *If engine is cold, move choke lever to close position (**b1**). If engine is hot, set choke to open position (**b2**).*

4.3.2 Turn engine switch to "ON" (**e1**).


4.3.3 Open throttle by moving it slightly to left (**d1**).

4.3.4 Pull starter rope (**c**).

Note: *If the oil level in the engine is low, the engine will not start. If this happens, add oil to engine. Some engines are equipped with an oil alert light that will come on while pulling the starter rope.*

4.3.5 Open choke as engine warms (**b2**).

4.3.6 Open throttle fully to operate.

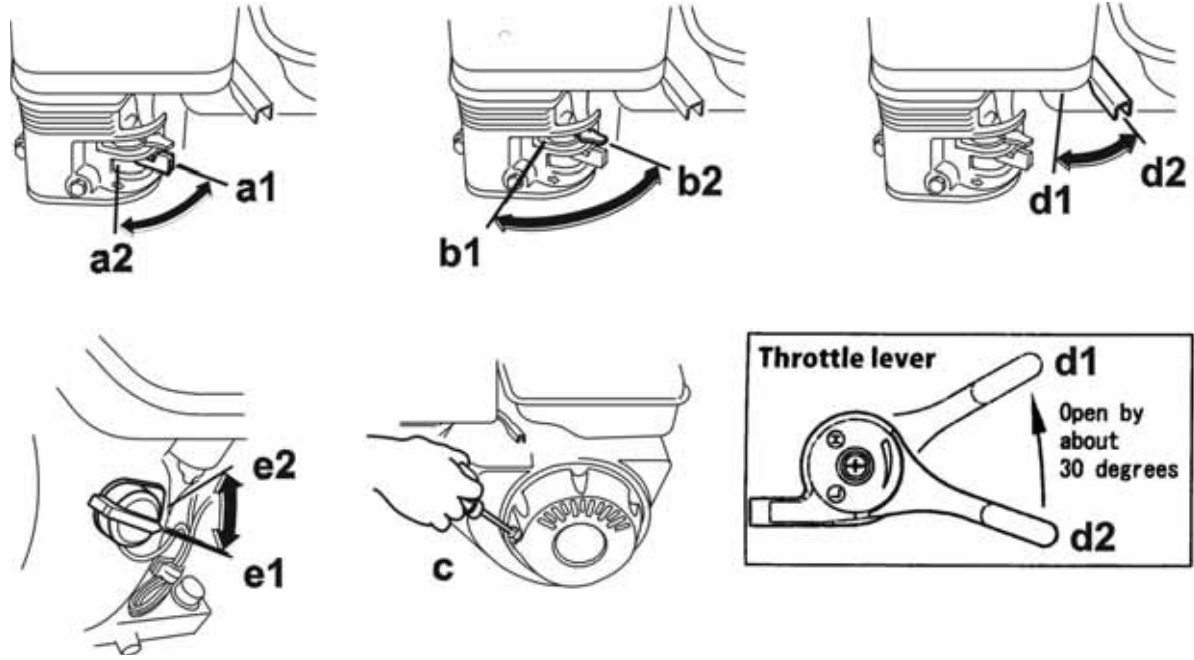

Graphic 3

4.4 To Stop

See Graphic 3

- 4.4.1 Reduce engine RPM to idle by moving throttle completely to right (d2).
- 4.4.2 Turn engine switch to “OFF” (e2).
- 4.4.3 Close fuel valve by moving lever to the left (a2).

4.5 Application

This plate is designed for compacting loose, granular soils, gravel, and paving stones. It is intended to be used in confined areas and areas next to structures such as walls, curbs, and foundations. Plates equipped with water tanks can be used for compacting asphalt.

This plate is not recommended for compacting cohesive soils with a heavy clay content. For cohesive soil, use a vibratory rammer or sheepfoot roller.

4.6 Operation

Run the engine at full throttle and allow the plate to pull itself along at its normal speed. When operating on an incline it may be necessary to assist the plate by pushing it forward slightly. When operating downhill hold the plate back slightly, if it begins to pick up speed. Depending on the material being compacted, three or four passes are recommended to achieve the best compaction.

While a certain amount of moisture in the soil is necessary, excessive moisture may cause soil particles to stick together and prevent good compaction. If soil is extremely wet, allow it to dry somewhat before compacting.

If soil is so dry as to create dust clouds while operating plate, some moisture should be added to the ground material to improve compaction. This will also reduce service to the air filter.

For compacting asphalt, use a water tank to wet the asphalt and the underside of plate. This will prevent asphalt material from sticking. Two passes are usually sufficient to ensure good compaction.

When using the plate on paving stones, attach a pad to the bottom of the plate to prevent chipping or grinding surface of stones. A special polyurethane pad designed for this purpose is available as an optional accessory.

CAUTION: DO NOT operate the plate on concrete or on extremely hard, dry, compacted surfaces. The plate will jump rather than vibrate and could damage both the plate and the engine.

5. Maintenance

5.1 Periodic Maintenance Schedule

The chart below lists basic engine maintenance. Refer to engine manufacturer's Operation Manual for additional information on engine maintenance.

	Daily before starting	After first 20 hrs.	Every 2 weeks or 50 hrs.	Every month or 100 hrs.	Every year or 300 hrs.
Check fuel level.	●				
Check engine oil level.	●				
Inspect fuel lines.	●				
Inspect air filter. Replace as needed.	●				
Check and tighten external hardware.	●				
Check and adjust drive belt.		●			
Clean air cleaner elements.			●		
Inspect shock mounts for damage.			●		
Change engine oil.		●			
Clean cooling system.				●	
Clean sediment cup / fuel filter.				●	
Check and clean spark plug.				●	
Check and adjust valve clearance.					●
Grease exciter bearing.					●

5.2 Cleaning Plate

Clean plate after use to remove dirt, stones, and mud caught under the engine console. If plate is being used in a dusty area, check engine cylinder cooling fins for heavy dirt accumulation. Keep engine cylinder fins clean to prevent engine from overheating.


5.3 Drive Belt

See Graphic 4

On new machines or after installing a new belt, check belt tension after first five hours of operation. Check and adjust belt every 50 hours thereafter.

To adjust belt:

- 5.3.1 Loosen the two screws (**a**) on the beltguard, then remove the beltguard, keeping the screw assemblies captured on the beltguard.
- 5.3.2 Loosen the four nuts (**b**) which hold the engine to the console, and the screw (**c**) which holds the beltguard back to the console.
- 5.3.3 Slide the engine backward (towards the handle) to tighten the belt, forward to loosen the belt.
- 5.3.4 Adjust the belt so that it deflects 10–13 mm (**d**) when pressed midway between the belt pulleys.
- 5.3.5 Make sure that the clutch pulley (**f**) and the exciter pulley (**e**) are in alignment. Place a straight edge against the exciter pulley (**e**) and move the engine so that the two pulleys are parallel.
- 5.3.6 Torque all nuts and screws to 20.5 Nm as you reassemble the machine.

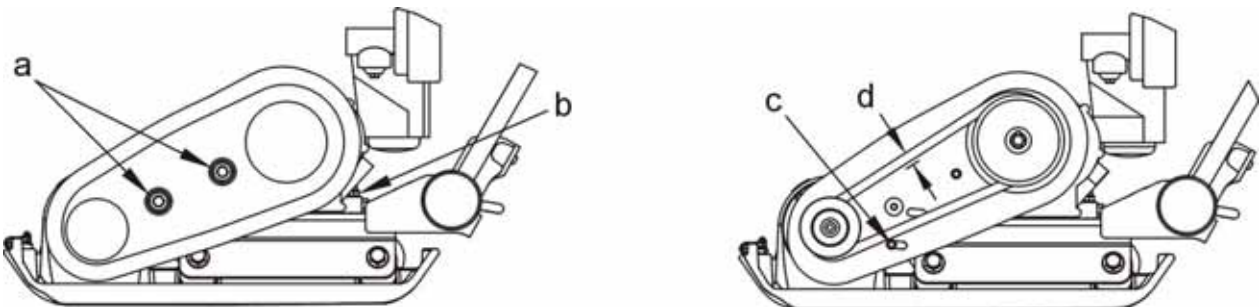

Graphic 4

5.4 Spark Plug

See Graphic 5

Clean or replace spark plug as needed to ensure proper operation. Refer to the engine Owner's Manual.




WARNING: The muffler becomes very hot during operation and remains hot for awhile after stopping the engine. Do not touch the muffler while it is hot.

Note: Refer to the Technical Data for the recommended spark plug type and the electrode gap setting.

- 5.4.1 Remove spark plug and inspect it.

- 5.4.2 Replace plug if the insulator is cracked or chipped.
- 5.4.3 Clean spark plug electrodes with a wire brush.
- 5.4.4 Set the electrode gap (**a**).
- 5.4.5 Tighten spark plug securely.

CAUTION: A loose spark plug can become very hot and may cause engine damage.

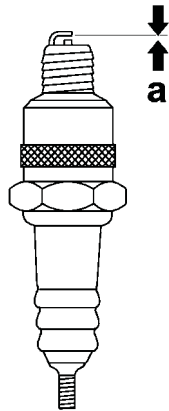

Graphic 5


5.5 Engine Oil

See Graphic 6

- 5.5.1 Drain oil while the engine is still warm.
- 5.5.2 Remove the oil fill plug (**a**) and drain plug (**b**) to drain oil.

Note: *In the interests of environmental protection, place a plastic sheet and a container under the machine to collect any liquid which drains off. Dispose of this liquid in accordance with environmental protection legislation.*

- 5.5.3 Install drain plug.
- 5.5.4 Fill the engine crankcase with recommended oil up to the level of the plug opening (**c**). See Technical Data for oil quantity and type.
- 5.5.5 Install the oil filler plug.

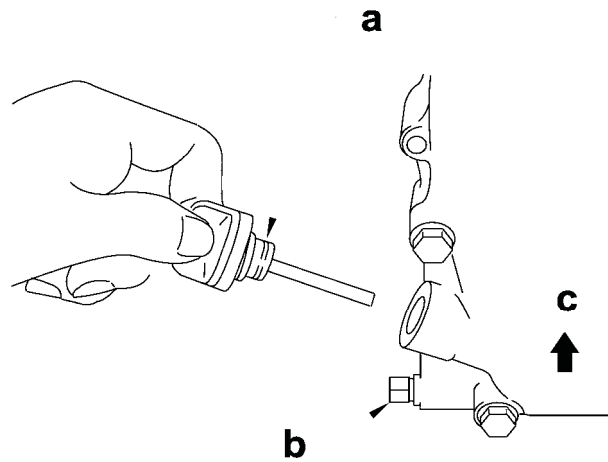

Graphic 6

5.6 Air Cleaner

See Graphic 7

The engine is equipped with a dual element air cleaner. Service air cleaner frequently to prevent carburetor malfunction.


CAUTION: NEVER run engine without air cleaner. Severe engine damage will occur.



WARNING: NEVER use gasoline or other types of low flash point solvents for cleaning the air cleaner. A fire or explosion could result.

To service:

- 5.6.1 Remove air cleaner cover (a). Remove both elements and inspect them for holes or tears. Replace damaged elements.
- 5.6.2 Wash foam element (b) in solution of mild detergent and warm water. Rinse thoroughly in clean water. Allow element to dry thoroughly. Soak element in clean engine oil and squeeze out excess oil.
- 5.6.3 Tap paper element (c) lightly to remove excess dirt. Replace paper element if it appears heavily soiled.

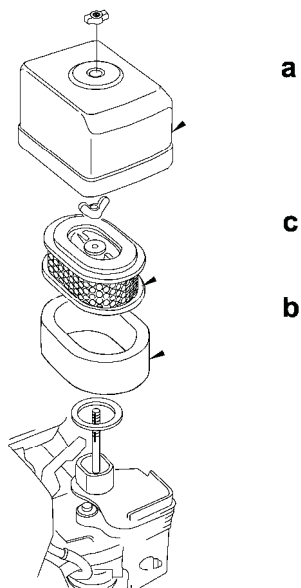


Graphic 7

5.7 Cleaning Sediment Cup

See Graphic 8

- 5.7.1 Turn fuel valve off.
- 5.7.2 Remove sediment cup (a) and O-ring (b).
- 5.7.3 Wash both thoroughly in a nonflammable solvent. Dry and reinstall them.
- 5.7.4 Turn fuel valve on and check for leaks.

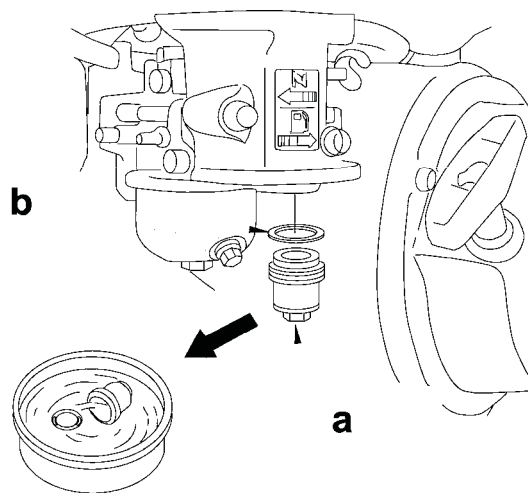

Graphic 8


5.8 Adjusting Engine Speed

See Graphic 9

Adjust to a full load speed of 3600 ± 100 rpm. To adjust engine speed:

- 5.8.1 Place machine on a rubber test mat to prevent it from moving.
- 5.8.2 Start engine and allow it to warm up for a minute.
- 5.8.3 Turn throttle stop screw (a) in to increase speed, out to decrease speed. Make sure throttle lever is touching stop screw before measuring RPM.

CAUTION: Running plate at a speed higher than that listed in Technical Data can damage both the plate and the engine.

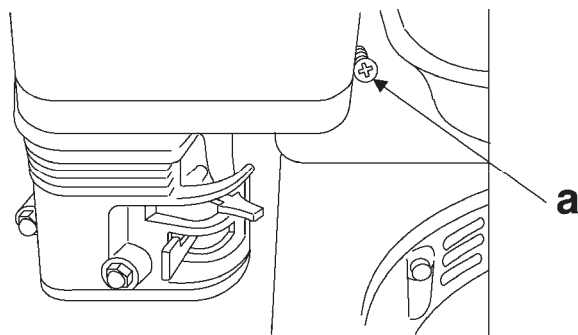


Graphic 9

5.9 Carburetor Adjustment

See Graphic 10

- 5.9.1 Start the engine and allow it to warm up to operating temperature.
- 5.9.2 Set the pilot screw (a) 2 turns out. See Note.
- 5.9.3 With the engine idling, turn the pilot screw (a) in or out to the setting that produces the highest rpm.
- 5.9.4 After the pilot screw is adjusted, turn the throttle stop screw (b) to obtain the standard idle speed. See Technical Data.

Note: On some engines the pilot screw is fitted with a limiter cap (c) to prevent excessive enrichment of the air-fuel mixture in order to comply with emission regulations. The mixture is set at the factory and no adjustment should be necessary. Do not attempt to remove the limiter cap. The limiter cap cannot be removed without breaking the pilot screw.

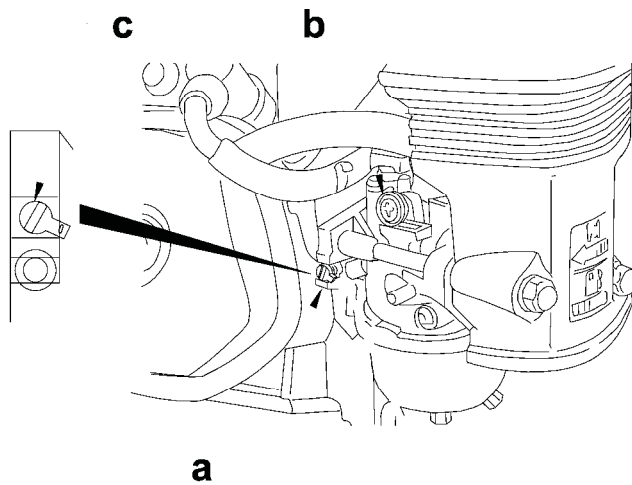

Graphic 10

5.10 Exciter Lubrication

See Graphic 11

Adjust to a full load speed of 3600 ± 100 rpm. To adjust engine speed:

The bearings in the exciter assembly are splash lubricated and rotate at very high speed. It is important to maintain the exciter oil at the correct level and change it regularly.

Check oil level in exciter every 50 hours of operation.

To check oil level, place plate on a flat, level surface. Remove the drain plug (a) with seal ring (b). Oil level should be at drain plug threads. Add oil as required.


Change exciter oil every 300 hours of operation.

To drain oil, remove plug (a) from end of exciter and tilt plate up.

Note: In the interests of environmental protection, place a plastic sheet and a container under the machine to collect any liquid which drains off. Dispose of this liquid in accordance with environmental protection legislation.

Place plate on a level surface and add oil through plug opening until oil reaches the drain plug threads. **See Technical Data.**

Notice: DO NOT overfill. Too much oil in the exciter can reduce performance and damage the drive belt.

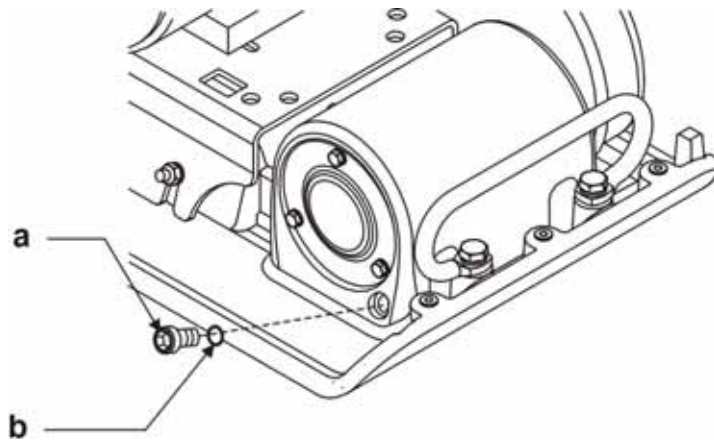

Graphic 11

5.11 Troubleshooting

Problem / Symptom	Reason / Remedy
Plate does not develop full speed. Poor compaction.	<ul style="list-style-type: none"> • Engine throttle control not completely open. • Throttle control not adjusted correctly. • Ground too wet, plate sticking. Allow soil to dry before compacting. • Drive belt loose or worn, slipping on pulleys. Adjust or replace belt. Check that engine mounting bolts are tight. • Exciter bearings binding. Check condition and level of oil in exciter. Add or change oil. • Air filter clogged with dust, reducing engine performance. Clean or replace air filter. • Engine speed too low. Check engine speed with tachometer. Adjust or repair engine to run at correct speed. Refer to engine manual.
Engine running, no vibration	<ul style="list-style-type: none"> • Engine throttle not open. • Drive belt loose or broken. Adjust or replace. • Clutch damaged. Inspect and replace clutch. • Engine speed too low. Check engine speed. • Too much oil in exciter. Adjust oil to correct level.
Plate jumps or compacts unevenly.	<ul style="list-style-type: none"> • Ground surface too hard. • Shock mounts loose or damaged.

5.12 Storage

If plate is being stored for more than 30 days:

5.12.1 Remove loose stones and dirt from plate.

5.12.2 Clean engine cylinder cooling fins.

5.12.3 Clean or replace air filter.

5.12.4 Change exciter oil.

5.12.5 Change engine oil and follow procedures described in engine manual for engine storage.

5.12.6 Cover plate and engine and store in a clean, dry area.

5.13 Lifting Machine

See Graphic 12

See Technical Data for weight of machine.

5.13.1 Stop the engine.

5.13.2 Obtain help from a partner and plan the lift.



WARNING: To avoid burns or fire hazards, let the engine cool before transporting the machine or storing it indoors. Turn the fuel valve to the off position and keep the engine level to prevent fuel from spilling.

5.13.3 Grasp machine by the lifting handles **(a)** and **(b)**.

5.13.4 Lift machine as shown.




WARNING: To reduce risk of back injury while lifting, keep feet flat on ground and shoulder width apart. Keep head up and back straight.

To lift machine mechanically:

Notice: *Before attempting to lift, be sure that lifting devices can safely handle weight of machine. See Technical Data for weight of machine.*

5.13.5 Attach hook, harness, or cable to machine as shown, and lift as desired.

CAUTION: DO NOT lift the vibroplate by its guide handle. The vibroplate can shift, causing it to fall.

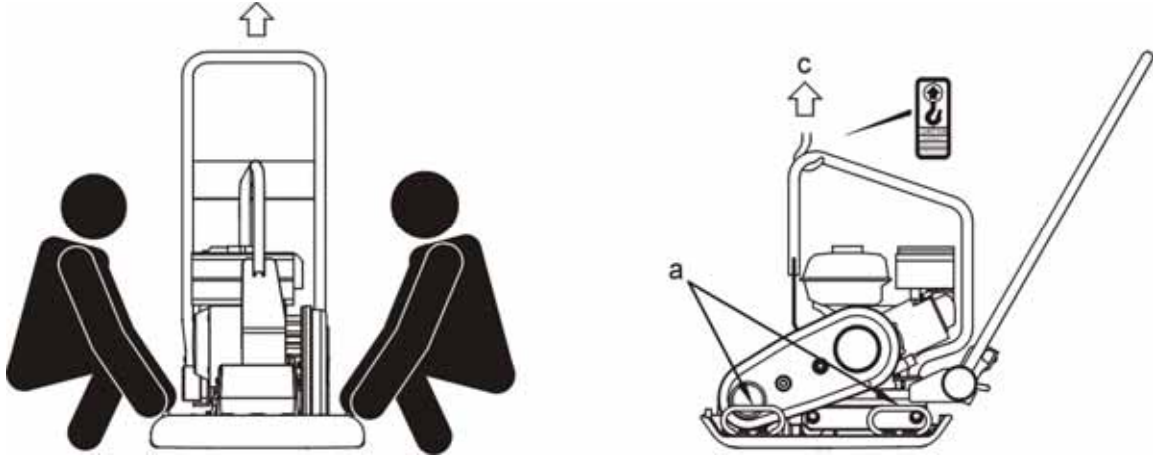

Graphic 12


5.14 Transporting Machine

See Graphic 13




WARNING: To avoid burns or fire hazards, let engine cool before transporting machine or storing indoors.

- 5.14.1 Turn fuel valve to the off position and keep the engine level to prevent fuel from spilling.
- 5.14.2 Tie down machine on vehicle to prevent machine from sliding or tipping over. Tie machine to vehicle at points shown on graphic.

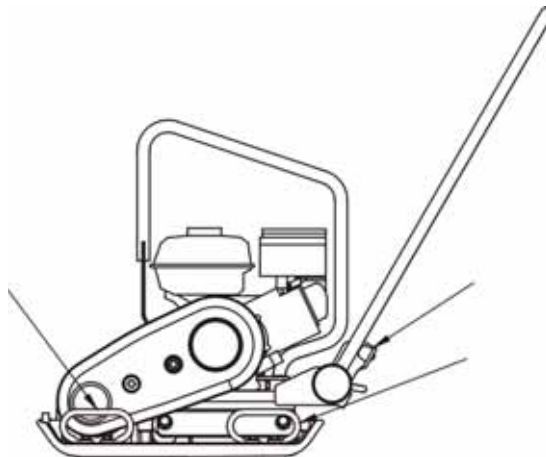


Graphic 13

5.15 Parts List

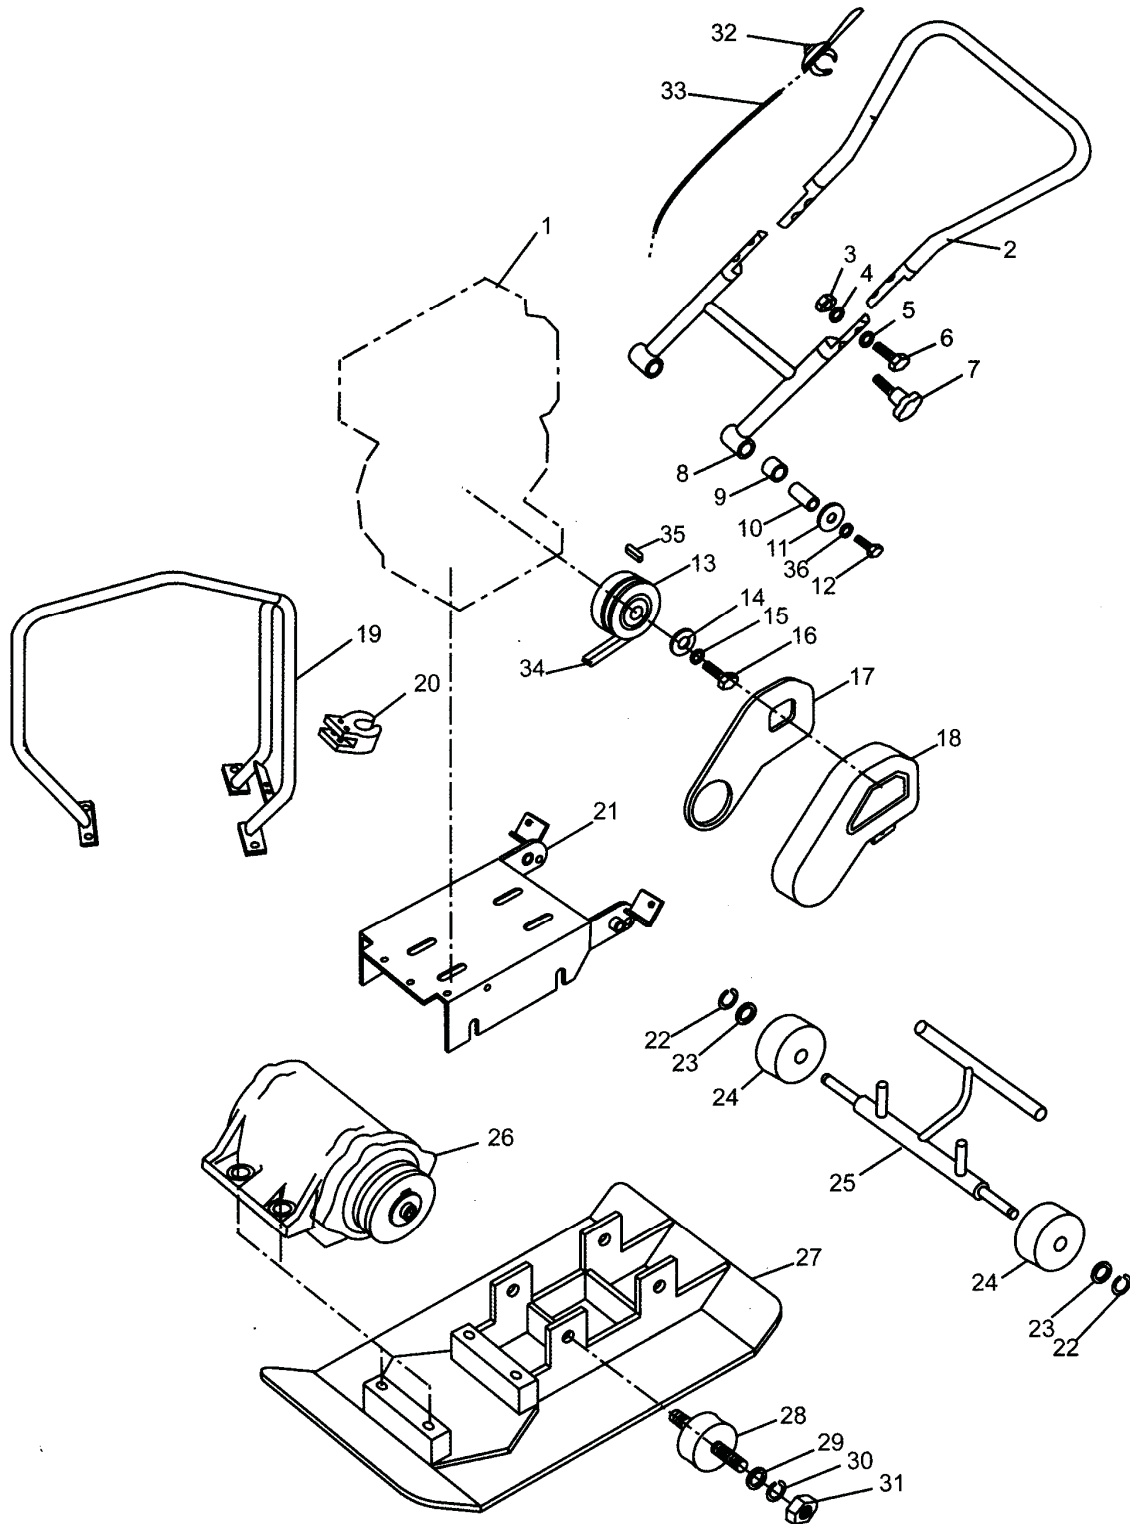

No.	parts no.	Description	Qty	No.	parts no.	Description	Qty
1	100001	Engine	1	19	100019	Guard hook	
2	100002	Handle	1	20	100020	Holder, wheel	
3	100003	Nut M10	4	21	100021	Base	
4	100004	Washer, plat M10	4	22	100022	Stop ring 14	2
5	100005	Washer, lock M10	4	23	100023	Washer, plat M12	2
6	100006	Hexagonal bolt M10×30	2	24	100024	Wheel	2
7	100007	Knob M10×25	2	25	100025	Support,wheel	1
8	100008	Vib. proof handle	1	26	100026	Vibrator assembly	1
9	100009	Rubber	2	27	100027	Vibrating plate	1
10	100010	Rubber coupling	2	28	100028	Shock absorber	4
11	100011	Washer, plat 12.5×40×3	2	29	100029	Washer, plat M10	4
12	100012	Hexagonal bolt M12×65	2	30	100030	Washer, lock M10	4
13	100013	Clutch assembly	1	31	100031	Nut M10	4
14	100014	Washer, plat M8	1	32	100032	Throttle lever	1
15	100015	Washer, lock M8	1	33	100033	Dragline	1
16	100016	Hexagonal bolt M8×25	1	34	100034	V-belt	1
17	100017	Belt cover, in.	1	35	100035	Key,clutch assy 8×7×50	1
18	100018	Belt cover	1	36	100036	Washer, lock M12	2

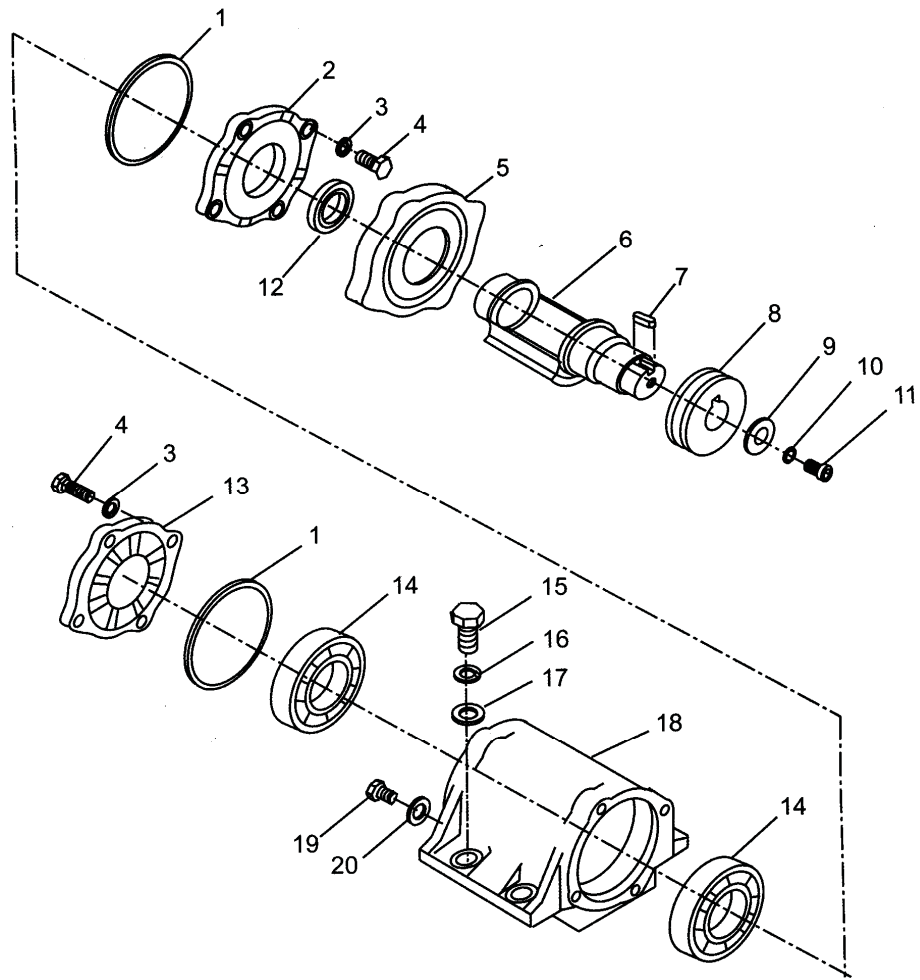

No.	parts no.	Description	Qty	No.	parts no.	Description	Qty
1	1000501	Packing	2	11	1000511	Hexagonal bolt M10x40	1
2	1000502	Case cover/pulley	1	12	1000512	Oil seal	1
3	1000503	Washer, lock M8	8	13	1000513	Case cover/shut-off	1
4	1000504	Hexagonal bolt M8x25	8	14	1000514	Bearing 6211	2
5	1000505	Cover seal, vib.	1	15	1000515	Hexagonal bolt M16x40	4
6	1000506	Ecc. rotary shaft	1	16	1000516	Washer, lock M16	4
7	1000507	Key 8x7x18	1	17	1000517	Washer, plat M16	4
8	1000508	Pulley, driven	1	18	1000518	Vibrating case	1
9	1000509	Washer 11x40x2.5	1	19	1000519	Plug, oil M12xl. 25x20	1
10	1000510	Washer, lock M10	1	20	1000520	Washer, copper M12	1