

# AccessPoint

## Watertight Pipe Access and Plug Solution

### Installation

#### Step 1

Determine the required position of the Access Point and mark the entry point.


#### Step 2

Drill a hole using a sharp, 2-1/8" hole saw. Remove any excess burring and wipe the inside surface clean.



#### Step 3

Insert the Access Point Plug into the hole so that the curvature of the seal follows the curvature of the pipe.

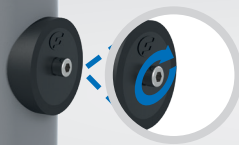

#### Step 4

Secure the Access Point to the pipe using a 6mm Allen wrench.



#### Step 5

The installation of the Access Point is now complete.

**NOTE:** When cutting into Cast Iron pipe, it is important to use a coolant to ease cutting and to prolong the life of the drill bit.

If removing the Access Point, take care to not fully remove the screw, as this risks the compression plate falling into the pipe.

WATCH THE  
INSTALLATION  
VIDEO



US: [www.fernco.com](http://www.fernco.com) | CA: [www.fernco.ca](http://www.fernco.ca)

Fernco® is a registered trademark of Fernco, Inc. Specifications subject to change. Follow local codes. Improper installation may void warranty.  
Support: [www.fernco.com](http://www.fernco.com) | (810) 503-9000. Packaged in the USA with globally sourced materials.

LA0125V1